

Ashworth™ by Woodgrain Millwork Screen Kit Installation Instructions Aluminum – French Door Double Screen

Tools Required: Phillips Screwdriver, Standard Screwdriver, Tap Measure, Rubbing Alcohol and Rubber Mallet

1. After installing your Ashworth unit, open both doors and secure both from closing.
2. View from exterior (Fig. 1).
3. Using a mixture of 1/2 rubbing alcohol and 1/2 water, remove any dirt and grime from the inside top and side frame (Fig. 2 and Fig. 3). Allow the unit to air dry before installing the top and side screen channel extrusions.
4. Carefully remove the two extrusions from the packing (Fig. 4). Leave the two screens inside the packing for protection until they are ready to be installed.
5. Remove the plastic strip from the adhesive backing of the side channel extrusion. Carefully apply the extrusion to the jamb of the "Secondary panel" side of the unit as shown (Fig. 2). NOTE: On French entry unit side screen track application is not necessary (Fig. 5). The long leg of the screen channel should be to the exterior so the angled base of the screen channel sets correctly on the unit frame. The face of the long leg should be flush with the face of the unit frame screen channel wall as shown (Fig. 2). Once the channel is positioned correctly, push the track firmly down onto the unit frame along the entire length of the track to ensure tape adhesion.
6. Remove the plastic strip from the adhesive backing of the head channel extrusion. With the long leg of the head track towards the exterior of the unit slide the end into the vertical track tight up against the side unit frame (Fig. 3). Using a tape measure, locate the top extrusion on the head approximately 1/16" from the face of the unit frame screen channel wall making sure it is located straight across the head (Fig. 3). Once the channel is located correctly, push the track down firmly onto the unit frame along the entire length of the track to ensure tape adhesion.
7. Carefully remove the primary and secondary screens from the package. The primary screen is taller than the secondary screen. Install the secondary screen first.
8. Place the top track wheels inside the top channel track. Be sure that the wheels are directly on the inside roller track. Place the bottom track wheels onto the sill cover roller track. Do this by using a flat head screwdriver to place the spring loaded wheels on the track. Adjust the screen by turning the two Phillips head screws in or out to set the track wheel height. Repeat this process for the primary screen.
9. Install the latches for both screens. Latch installation instructions are provided with the latch kit. Keep the secondary screen latched when not in use. Use the primary screen as the active screen. Now installation is complete!!

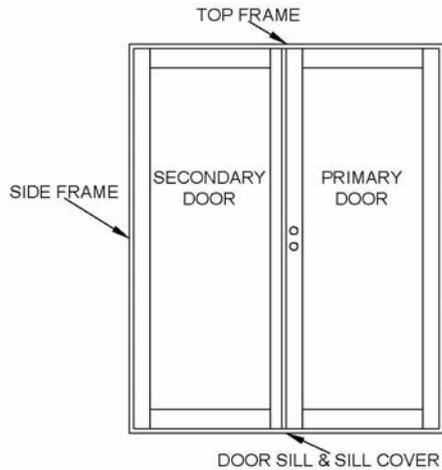


Fig. 1



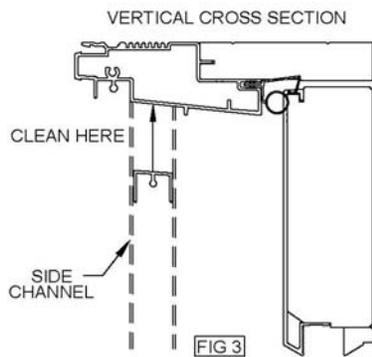


Fig. 4

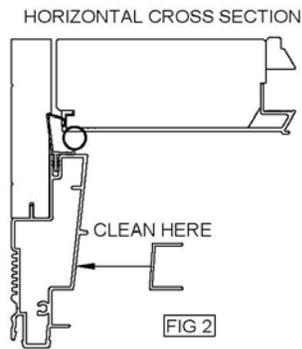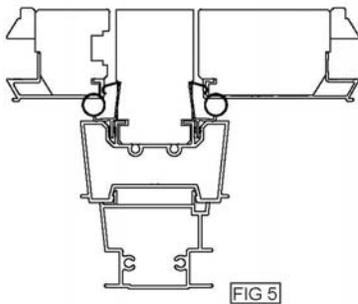

For French Entry Units, side screen stop application is not necessary, screen tracks are extruded into profile.

If you have any questions or experience any problems with your Woodgrain Millwork product, visit our website at www.ashworthdoors.com or contact our Customer Service Department at 800.935.2000.